



Dart Aerospace Ltd.
1270 Aberdeen St
Hawkesbury, ON
K6A 1K7
Canada

Tel (613) 632-5200
Fax 613 632-5246

D3391-023

Job Sheet 184428



SOLD
ALONE

Part No: D3391-023

Job Qty: 1 ea

Part Name: Mid Tube Assembly



Part Weight: 0 lbs

Status: New

Priority: Medium

Job Created: 10/9/18

Job Tracking No:

Due Date: 11/12/18

Created By: Marie Lajeunesse

Type: SOLD

Description:

Note: DWG REV J SHEET 2 and 7 IPP A 05.10.20 New Issue KJ/EC IPP B IPP C 07.03.20 rev F dwg EC IPP D 07.03.28 re-format EC IPP E 07.10.31 ecn 1053P EC IPP Rev:F ECN 1056 07-11-13 DD verified by: EC IPP Rev:G 08-09-08 new process (ecn 08-510) DD verified by:EC IPP Rev:H 08-09-10 revH as per dwg DD verified by:EC IPP Rev: I 08-11-13 Removed steps per w/o, QC KJ verified by: ec IPP Rev:J add in seq 140 expire date &b# sikaflex DD 10.02.17 verified by:EC

Ship Via:

Bill of Materials

Job Routing

Op No	Operation	Qty	Start Date	Due Date	Standard		Workcenter/Supplier		Sign-off
					Setup hrs	Run Hrs	Workcenter / Supplier	Lead Time	
90	Start up Operation	1 Ea		11/12/18	0.00	0.00	Start Up Skidtubes-1		JY
100	Skidtubes	1 pcs		11/12/18	0.88	2.11	Skidtubes-4		JY JAS
110	QC	1 pcs		11/12/18	0.00	0.00	QC5		38
120	HandFinish	1 pcs		11/12/18	0.00	0.38	HandFinish1		D.R. 18/10/17
130	QC	1 pcs		11/12/18	0.00	0.00	QC7-2		BE
140	Skidtubes	1 pcs		11/12/18	0.00	2.11	Skidtubes-4		BE
150	QC	1 pcs		11/12/18	0.00	0.00	QC5		BE
160	Skidtubes	1 pcs		11/12/18	0.00	2.11	Skidtubes-4		BE JAS
170	QC	1 pcs		11/12/18	0.00	0.00	QC10		38 DAS
180	QC	1 pcs		11/12/18	0.00	0.00	QC5		9-89 38
185	HandFinish	1 pcs		11/12/18	0.00	0.38	HandFinish2		D.R. 18/10/17
191	SprayPaint	1 pcs		11/12/18	0.00	0.91	Spray Paint		NA
192	Outsource	1 pcs		11/12/18			ATE003-VC		CT 18-10-25
193	Packaging	1 pcs		11/12/18	0.00	0.00	Packaging2		OCT 31 2018
200	QC	1 pcs		11/12/18	0.00	0.00	QC14		11-12-10-31
230	HandFinish	1 pcs		11/12/18	0.00	0.38	HandFinish4		11-12-10-31
240	QC	1 pcs		11/12/18	0.00	0.00	QC5		NOV 01 2018 68
250	Packaging	1 pcs		11/12/18	0.00	0.00	Packaging3-1		NOV 01 2018 68
260	QC21-SA	1 Ea		11/12/18	0.00	0.00	QC21		NOV 01 2018 70

Part Op 100 - 1-Cut tube to finish length as per Dwg D3391 2-Drill pilot holes using DT8796 (Do not drill "B" holes) and drill only 1 hole 4-Remove .030" from Fwd indexing Ridge as per Dwg D3391 5-Remove indexing ridge on Fwd & Aft end of skidtube as per Dwg D3391 6-Deburr, scibe batch # on aft end. 7- Locate D3391-021 in D3391-023 at 9.00" (see view F-F) 8- Transfer drill one fwd saddle hole only to .188" dia, transfer drill all remaining fwd saddle holes using DT 8149 locating from previously drill .188" dia hole, using t-pins and clicos to ensure perfect allingment, open up previously tranfer drilled pilot holes in D3391-023/-021 using drill press. ON FIRST SIDE ONLY drill out 2nd and forth fwd saddles holes to 0.500" as per ON 2ND SIDE ONLY ream out 2nd and forth saddle hole to 0.499". D3391-021 BATCH: 9- Drill #30 pilot holes using wearplate Jig DT8217 Identify Ø0.375" holes with paint marker, ***DO NOT DRILL HOLES #3-19-20 FROM FWD END OF JIG*** Locating from two fwd wearplate holes in D3391-023 drill remaining 6 wearplte holes in D3391-021 using DT8937 10- Open wearplate holes of D3391-023 assembly detail section Q-Q to Ø0.375" (10 holes) as per Dwg D3391 Open wearplate holes of D3391-023 assembly detail section H-H to

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐					
Date :		Step #:		QTY Effective :				MRB (QSI042) Approval	
Description Work Order Deviation				Disposition				Completed By	
								Lead hand / Supervisor Approval Verification	
Root Cause		FAULT CATEGORY							
Environment ☐	No Re-verification ☐	Pressure/Forced ☐	Temperature/Cure ☐	Power Loss/Surge ☐	Positioned Wrong ☐				
Design ☐	Operator ☐	Bending ☐	Set-up ☐	Folio/Program ☐	Outside Dimensions ☐				
Doc/Data ☐	Offset/Setup ☐	Centre Not Concentric ☐	BOM/Route ☐	Grain ☐	Over/Under tolerance ☐				
Equip/Tooling ☐	Supplier ☐	Cracks ☐	Broken/Damage/Defect ☐	Weld ☐	Part Incorrect ☐				
Handling/Pre ☐	Training ☐	Crimp/Kink/Ripple/Wave ☐	Inspection Incomplete/Unqualified ☐	Wrong Stock Pulled ☐	Part Lost/Missing ☐				
Material ☐	Use for Testing ☐	Cuffs ☐	Contamination ☐	Out of Sequence ☐	Part Moved ☐				
Internal Transport ☐	Poor Information ☐	Crushing ☐	Countersink ☐	Off-set ☐	Drawing ☐				
Tribal Knowledge ☐	Rushing ☐	Heat Treat ☐	Cut Too Short ☐	Mislabeled ☐	Finish ☐				
LOA ☐	Product Improvement ☐	Wave/Twist in Tube ☐	Instructions Incomplete/Unclear ☐	Fit/Function ☐	Misread ☐				
Substation ☐	Process Improvement ☐	Marks/Chatter ☐	Drill Holes ☐	Misaligned/off center ☐	Turning Sequence ☐				
Past Expiry Date ☐	Manufacturing Process ☐	OTHER : _____							
Misidentified ☐	Past Due ☐								

Ø0.297" (20 holes) as per Dwg D3391 Deburr and blow out all chips from inside tube, scribe

140 - 1-Open float bag holes as per dwg 2-C'sink float bag holes as per dwg 3- Prepare tube for welding 4-Bond web in place as per Dwg D3391 & QSI 015. Adhere for 12 hours) A/R Sikaflex exp: M138943 batch#: March 2019
NOTE: ENSURE WEB IS INSERTED IN AFT END OF TUBE

160 - 1-Weld crossbolt spacer as per dwg D3391 & QSI 004 2-grind weld flush

185 - Re-alodine

191 - PRIME AS PER DWG AND QSI005 4.2.1.3.3 PRIMER BATCH: _____ PAINT AS PER DWG AND QSI005 4.2.2.4 PAINT: _____

230 - 1-Install Inserts as per Dwg

192: Outsource: P0041455

Job BOM

Part / Item	Component Name	Quantity	Operation	Container
D2500-1-100	Skidtube Extrusion	1 Ea (1 ea)	90-Start up Operation	FL63333
D3389-1	Web	1 Ea (1 ea)	140-Skidtubes	S117103
D3681-1	Spacer	5 Ea (5 ea)	160-Skidtubes	S103210
ALS4-1032-130	Rivnut	20 Ea (20 ea)	230-HandFinish	S007279
D3591-1	Bushing	2 Ea (2 ea)	230-HandFinish	S122131

Job Allocations

Operation	Component Part	Required	Inventory	Allocated
90-Start up Operation	D2500-1-100	1	32	0
140-Skidtubes	D3389-1	1	11	0
160-Skidtubes	D3681-1	5	257	0
230-HandFinish	ALS4-1032-130	20	12,131	0
	D3591-1	2	11	0

Part Specifications

Specifications could not be found.



Container No: S119032



Part: D3391 - 023

Job No: 184428

Serial No/Batch: S119032

Revision: J

Inspector:

Exp Date:

Instructions: Various STC's

1270 Aberdeen Street
Dart Aerospace Ltd.
1270 Aberdeen Street
Hawkesbury, ON K6A 1K7
CANADA
TEL: 1 613 632-5200
Email: sales@dartaero.com
www.dartaerospace.com

Date: 10/31/18

1:13 PM Dart.lajeunesse.marie

DQA: _____ Date: _____




WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐			
Date : _____	Step #: _____	QTY Effective : _____		MRB (QSI042) Approval	
Description Work Order Deviation		Disposition		Completed By	
				Lead hand / Supervisor Approval Verification	
				QC / QA Coordinator Approval	
Root Cause Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐ No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐		FAULT CATEGORY Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐ Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐ Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Misabeled ☐ Fit/Function ☐ Misaligned/off center ☐ Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐			
OTHER : _____					

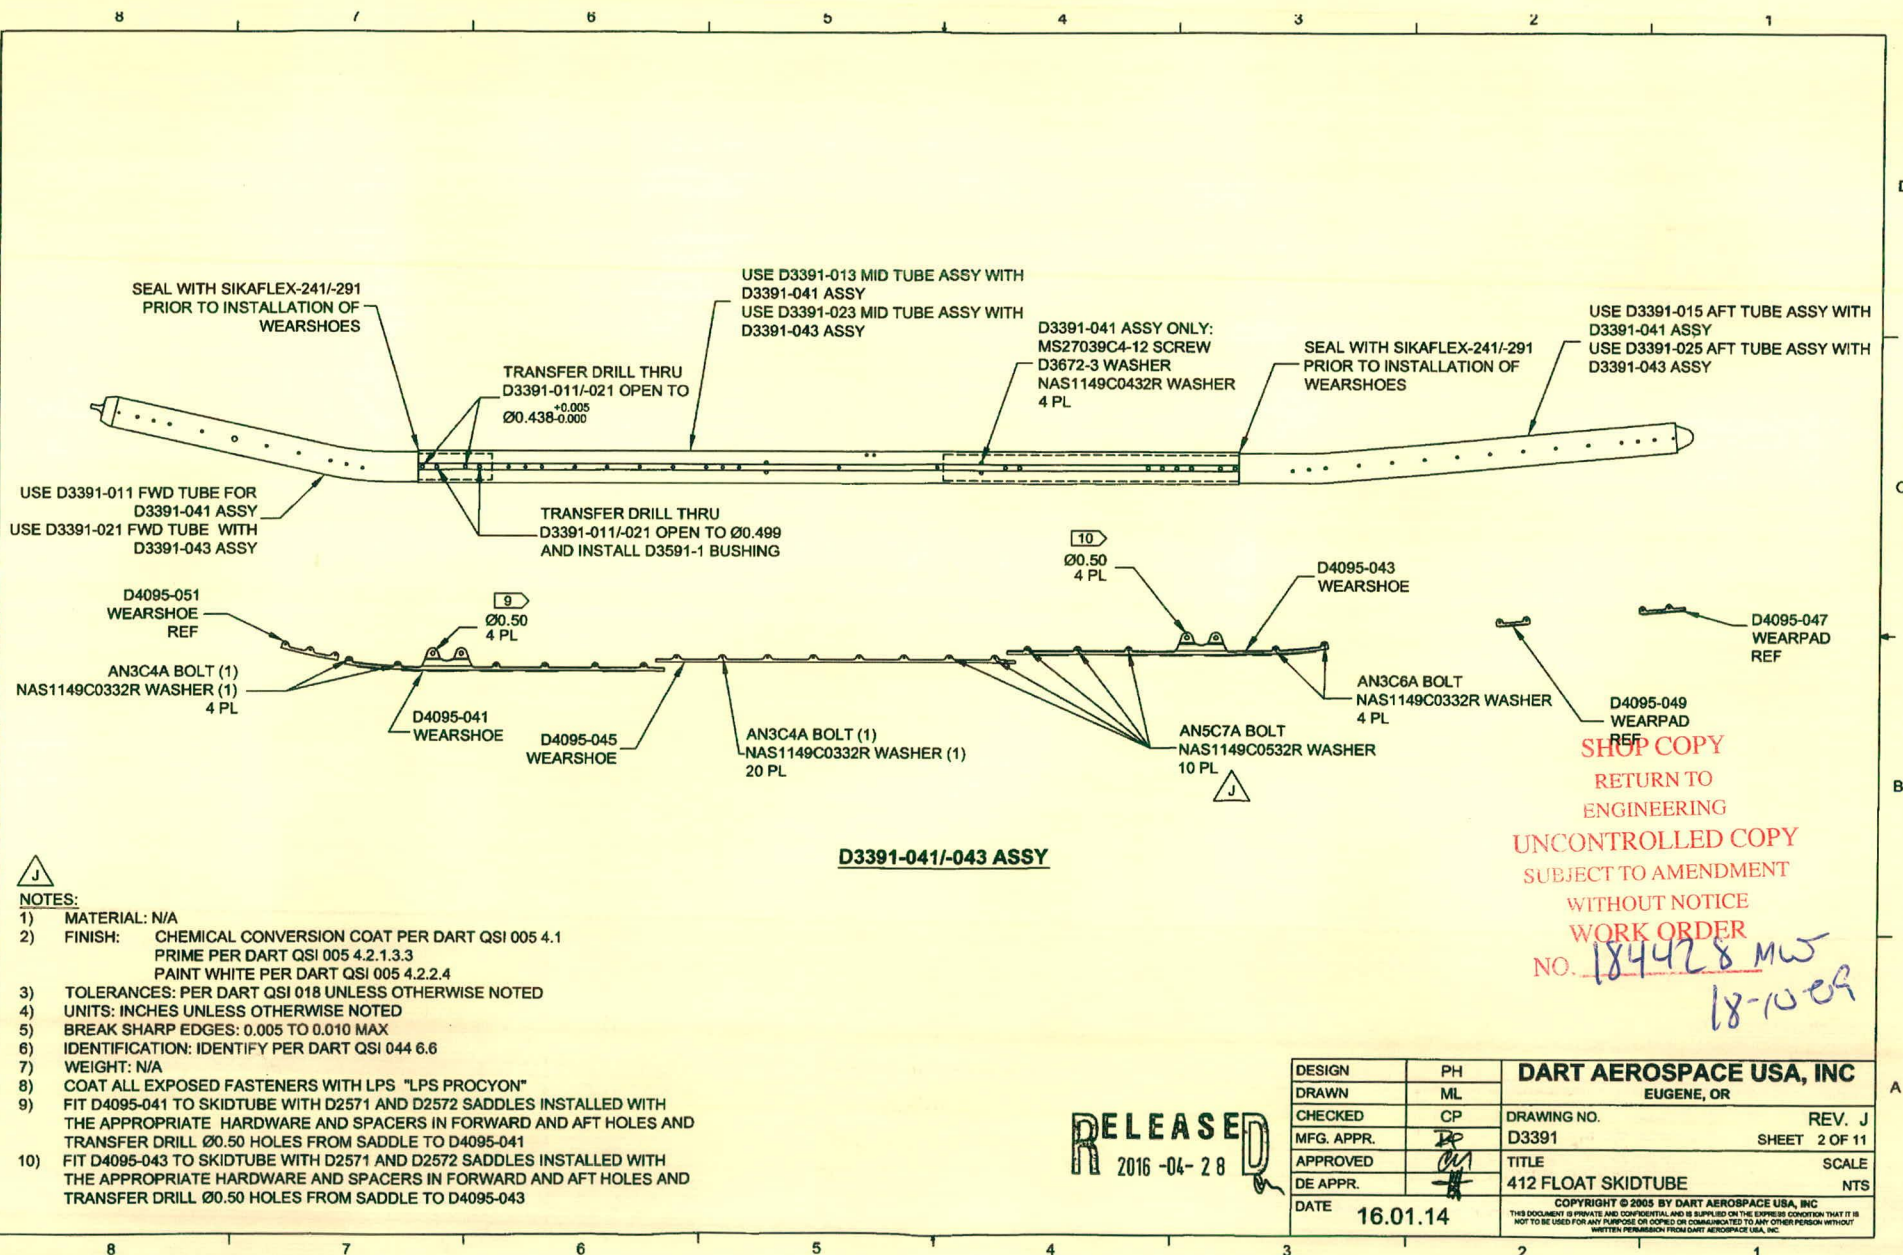



A

△

- 1) MATERIAL: MAKE FROM D2500-1-100
- 2) INSTALL D3389-1 WEB TO OUTER TUBE USING SIKAFLEX-241/-291 PER QSI 015
- 3) WELDING: PER DART QSI 004
- 4) USE DART DRILL TEMPLATE DT8217 TO LOCATE AND DRILL Ø0.297 AND Ø0.375 HOLES FOR WEARSHOE INSERTS AND NUTPLATES. CBORE AS NOTED AND INSTALL INSERT/NUTPLATES EXCEPT WHERE INDICATED.

DATE 16.01.14

COPYRIGHT © 2005 BY DART AEROSPACE USA, INC
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS
NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT
WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.

RELEASED
2016-04-28

